IMPORTANT

- Do not drop the unit.
- Do not place MINI ALERT close to the fireplace or heater.
- Do not expose MINI ALERT directly to Sunlight, Rainfall or Strong Light.
- Do not use different type of batteries, nor mix up old and new batteries.
- In case of malfunction, never attempt to repaire the unit yourself.
- Whenever MINI ALERT is swtiched on, both Alarm and Visitor Chime require 30 seconds (approx.) to be activated.
- MINI ALERT sensor alarm-chime is a very delicate and sensitive electronic product, please use it with extra care.

SPECIFICATIONS

- Power Supply : DC 4.5volt (R6, UM-3 or "AA" x 3)
- Detection Coverage: 80 degree in horizontal to 8 metre
 & 20 degree in vertical to 8 metre

Alarm Level Output : 80 dB

MINI ALERT sensor alarm features P.I.R. (Passive Infrared) sensor activated Alarm and Visitor Chime.

For best performance, read instructions before use and keep for future reference.

OPERATION

Simply open the battery door at the bottom, insert 3 "AA" size (UM3) batteries as indicated by the internal marking, then close the battery door.

Push the control knob to specified sign for Alarm or Visitor Chime.

(A) ALARM MODE


- It works by means of Passive Infrared motion sensor which detect moving human body within a range of 8M x 80 degree.
- The Alarm sounds automatically when any human body approachs the detected zone.
- A siren will sound for one minute then shut-off automatically and reset itself.

(B) VISITOR CHIME

 A pleasant "Ding Dong" melody sounds automatically to greet your visitor, when they approachs the detected zone.

(C) LOW BATTERY INDICATOR

• LED indicator at front will be on all the time when the batteries are getting low to the point that need to replace the batteries.

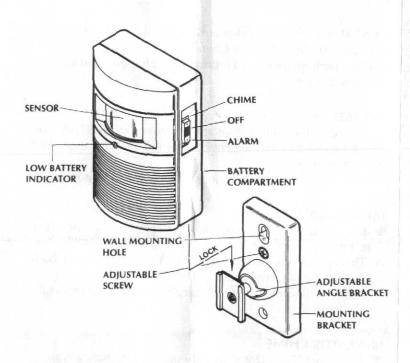

INSTALLATION

- Mount the adjustable angle wall mount bracket in the desired location with screw and screw anchor provided.
- Adjustable MINI ALERT to the desired detect direction, and hold it at position by tighten the screw at the bracket as indicated.

