



# WARNING

- Can cause death, serious injury or pain.
- Obey all warnings, instructions and all laws.
- See [www.TASER.com](http://www.TASER.com).

# TASER® STRIKELIGHT™

## QUICK START GUIDE

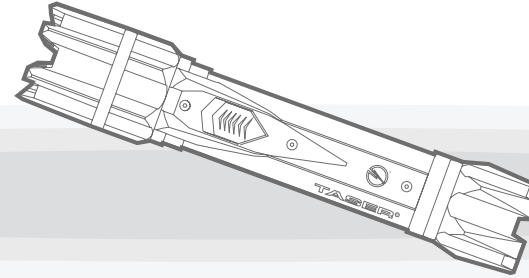

StrikeLight is a trademark of TASER International, Inc. and TASER and  are trademarks of TASER International, Inc. registered in the USA. All rights reserved. © 2015 TASER International, Inc.  
MPC0201 Rev B

### QUICK START GUIDE

START >>


**1**  
FIND charger



  
**WARNING**  
SWITCH SHOULD BE  
IN THE "OFF" POSITION


**2**  
LIFT charging  
port cover

- RED (CHARGING)
- GREEN (CHARGED)

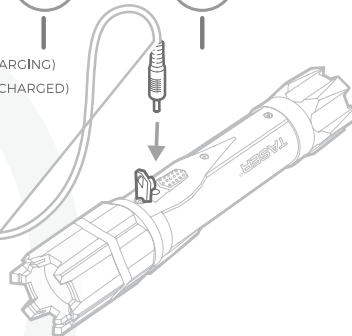

**3**  
PLUG IN charger


**4**  
AIM weapon  
in safe direction

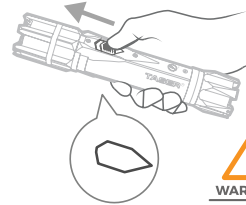

  
**WARNING**  
KEEP YOUR HANDSAWAY  
FROM THE FRONT OF  
THE WEAPON; MAKE SURE

**5**  
TURN ON switch

**6**  
PUSH trigger  
on bottom

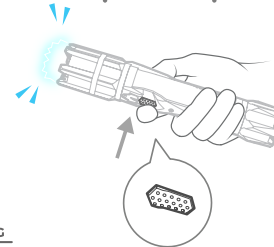

DO NOT USE THE WEAPON BEFORE  
REVIEWING MATERIALS AT [TASER.COM](http://TASER.COM)

**PRACTICE**

Practice a few times:  
On, Trigger, Off.